

Speedgate Manual



Opstelplaats

Enter and exit the garage

- Drive your car to the designated staging area.
- The card reader above the speedgate will read the transponder card placed behind the windshield.
- When the green LED on the card reader blinks, the card has been successfully read.
- Wait until the speedgate is fully open and the traffic light turns green.
- You can now enter or exit.

Anti-pass-back

- Attention! ALWAYS let the system read your card, even if the speedgate is already open. Do not follow someone through the speedgate if they have already opened it; let the speedgate close first.
- The anti-passback system records whether you are entering or exiting.
- If you drive in without letting the system read your card, you may not be able to exit.



Kaarlezer

 
Failures, theft and loss

- When the speedgate does not open, it might be because the card reader cannot read your card. Try placing it in a different position; see the other side for card placement on the windshield.
- For malfunctions, theft, or loss, you can report them to the manager, Azul Beheer, at info@azul-vgm.nl or 010-3038830.

Placement Transponder Card

Preparations

- The card will be placed inside the cardholder sticker on the inside of the windshield.
- Before placing the cardholder and the card, first clean the windshield with a cleaning cloth.
- Always test beforehand if the card is read correctly in the indicated position before you permanently attach the card with the sleeve.

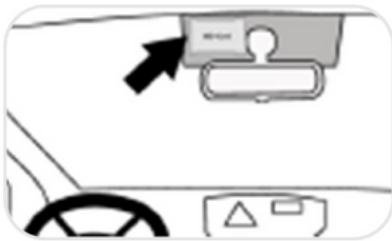


Near the rearview mirror

Standard windshield

- Place the card in the upper part of the windshield, near the rearview mirror, at least 4 cm from the top edge.
- If you have a tinted border around the windshield, be sure to place the card in a non-tinted section of the windshield.

Heated windshield

 - If you have heating wires in your windshield, it may disrupt the card's reading range. Test this first.
- If the card is not read with the standard placement,, place it as high as possible between the edge of the windshield and the heating wires.

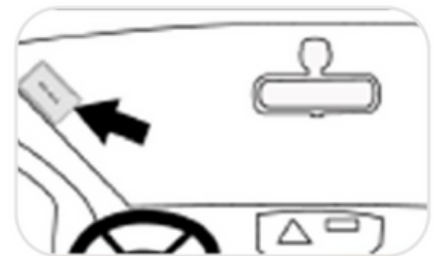

Between edge windshield and heating wires

Other windshields

- If none of the above options work, you may have a fully metallized windshield or another special type of window.
- In this case, you will need to hold the card outside the window so that the card reader can read it.